

2

1

B

B


A

A

2

1



Launch Pad

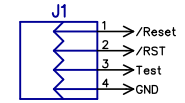




LaunchPad Port:
GND, TEST, /RST

Standalone:
/RST to /Reset

SPI Interface



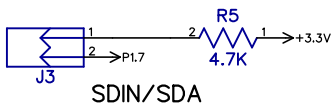
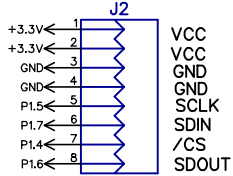


To use a 6-pin board on I2C:
/CS = +3.3V
SDO = GND (I2C Address)
SCL = SCLK
SDA = SDIN
Jumper J3 for pullup

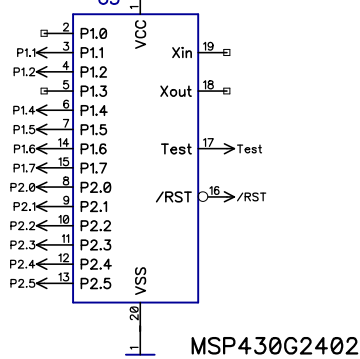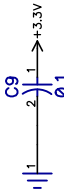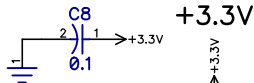

MSP430G2402

Contrast

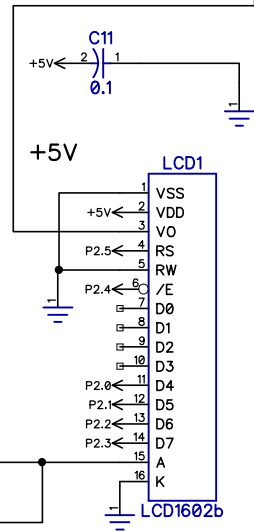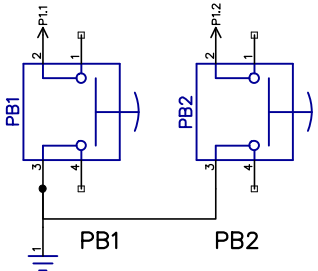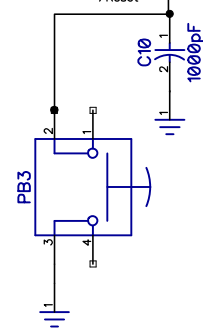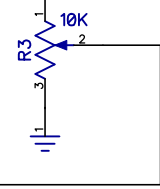

LCD Display
BMP-280 and SPI
(C) Jed Margolin 2021
1 of 1