



For Development
Connect GND, Test, and /RST
to Launchpad

For Standalone
Disconnect from Launchpad
and jumper /RST to /Reset

SPI rfm69	
P1.7	SDIN MISO
P1.6	SDOUT MOSI
P1.5	SCLK SCLK
P1.4	/CS /CS

I2C	
P2.5	SDA
P2.4	SCL

To use a 6-pin board on I2C:
/CS = VCC
SDO = GND (I2C Address)
SCLK = SCL
SDIN = SDA

My TX4U
For RFM69HW
Rev 2
Jed Margolin
5/9/2020